

Setting the time



Crown position 1:
Watch running

Crown position 2:
Set date
Rotate crown clockwise



Crown position 3:
Set time
Rotate crown anti-clockwise

Crown position 2:
Synchronize date line
Rotate crown anti-clockwise

Information about how to set the UNO 24

The crown has three positions, with the following functions:

Crown position 1, crown pushed in: standard setting, the watch is in operation

Crown position 2, crown in the middle position:

- Quick date setting by turning the crown in a clockwise direction
- Synchronization of the 24-hour hand with the date changeover, by turning the crown in an anti-clockwise direction

Crown position 3, crown fully pulled out:

- Time setting (crown should be turned anti-clockwise)

Setting should thus be carried out as follows:

- *Date* should be set by turning the crown in a clockwise direction with the crown in position 2.
- The *time* can only be set in crown position 3.

Set date changeover (date does not change at midnight)

You only need to perform the following step if the watch hand is not properly synchronized with the date changeover. Usually the watch is already synchronized when shipped.

Pull out the crown until it engages in position 3. Slowly turn the crown in an anticlockwise direction until the date changes. Stop turning immediately. Next push the crown into position 2 and slowly turn the crown in an anticlockwise direction to set the watch hand exactly to midnight.

Leaving the crown in position 2, now turn it in the other direction (i.e. clockwise) to set the correct date. When done pull the crown out to position 3 and set the time of day. Finally, push the crown back into position 1 to start using the watch normally. These steps will resynchronize the time of day with the date changeover.

Important note: Because of the way it is constructed, the movement used in the UNO 24 involves a certain degree of play in the hand.

To ensure that the time is displayed correctly, please proceed as follows when setting the UNO 24:

1. The time must be set in setting position 3 (crown pulled out completely).
2. When turning the hand, it is important to ensure that the final movement of the hand only takes place in a clockwise direction.

Depending on the production tolerance of your watch, the movement takes approximately 5-10 minutes to compensate for the degree of play in the hand and to set the hand in motion. You should thus set the time around 5-7 minutes later than the current time. Next press the crown back into its original position. As soon as the degree of play in the hand has been caught up, the UNO 24 will permanently display the correct time.

If you have any questions, please feel free to contact us:

Phone: +49 6174 961188 · E-mail: info@botta-design.de